

Manufacturer's notice

Comfort safety mouthpiece



Thank you for purchasing the comfort safety mouthpiece !

The comfort safety mouthpiece (ECLC) provide a lips thermal protection through waterproofing. This mouthpiece provides a crucial safety advantage by greatly increasing the likelihood of continuous ventilation in the event of unconsciousness for any reason.

Correctly fitted, the ECLC will help protect the breathing passages, efficiently preventing from drowning, and thus assist the rescuer who will not have to hold the mouthpiece in place during rescue.


Composition de la boîte:

- 1 comfort lips cover (ECLC)
- 1 adjustable elastic strap
- 1 blue clamp



Warning: The clamp must not be finger-tightened, but must be fitted using a rilsan gun at the correct tension of 220N.

Select the most comfortable position by trying it on

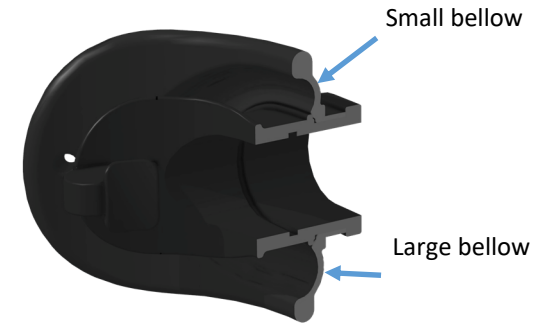

Remove the clamp together with the .mouthpiece



Clip the mouthpiece to the DSV.



Engage the clamp until it makes contacts with the mouthpiece.

The head of the clamp must be at the corner of the lips level.

Set the clamping gun at 220N.

Use the clamping gun to do the tightening.

